



Programming codes for a UR5-8400A remote control

If applicable, try the code marked with an asterisk [] first. This is the most popular code for the relevant brand.*

TV's

A to I	
Admiral	072, 081, 160, 161, 096
Advent	247
Aiko	103
Akai	006, 146, 248
Alaron	028
Amark	112, 143
America Action	043
Ampro	073, 167
Anam	043, 054, 055, 056, 080, 112
AOC	058, 006, 004, 112
Apex Digital	225, 226
Audiovox	076, 103, 043, 232
Baysonic	043
Bell & Howell	072
Bradford	043



Brocksonic	096, 212
Candle	006, 002, 003, 004
Capehart	058
Carver	164
Celebrity	001
Cetronic	043
Cineral	103, 120
Citizen	006, 002, 003, 004, 101, 103, 143
Classic	043
Concerto	004
Contec	043, 051
Coronado	143
Craig	043, 054, 028
Crosley	164
Crown	043, 143
Curtis Mathes	006, 004, 101, 143, 011, 072, 081, 120, 164
CXC	043
Daewoo	076, 103, 055, 004, 127, 143, 016, 043, 044, 125, 120
Daytron	004, 143
Denon	011
Dumont	004, 073
Dwin	161



Dynasty	043
Dynatech	062
Electroband	001
Electrohome	024, 076, 143
Emerson	005, 028, 043, 048, 076, 096, 155, 004, 051, 143, 151, 153, 154
Fisher	007, 057
Fluid	*015, 030, 007, 040, 062, 101, 233
Fujitsu	028, 164, 208, 246
Funai	028, 043, 052, 211
Futuretech	043
GE	006, 073, 130, 144, 160, 161, 004, 008, 009, 034, 056, 074, 091, 155, 081, 120
Gateway	228, 231
Gibraltar	004, 073
Goldstar (LG)	004, 106, 119, 110, 112, 113, 127, 143
Grunpy	028, 043
Davidson	028, 164
Harvard	043
Hallmark	007
Hitachi	163, 004, 007, 009, 011, 072, 010, 012, 023, 075, 143, 158
Infinity	164
Inkel	129



Inteq	073
J to R	
JBL	164
JCB	001
JCPenney	004, 006, 008, 024, 030, 065, 101, 143, 156, 160
Jensen	013
JVC	*038, 001, 034, 083, 206, 209
Kenwood	006, 001
Kloss	002, 059
KTV	006, 043, 143, 154
LG	116
Lodgenet	072
Loewe	207
Logik	072
Luxman	004
LXI	007, 015, 052, 081, 160, 164
Magnavox	006, 003, 004, 022, 028, 059, 060, 061, 063, 064, 127, 164, 094, 160, 229
Majestic	072
Marantz	164, 006
Matsui	164
Matsushita	080



Megatron	004
Memorex	004, 007, 072, 028, 096
METZ	088
MGA	024, 006, 004, 042
Midland	073
Minerva	088
Minutz	008
Mitsubishi	109, 024, 042, 004, 040, 146, 028, 081, 224
Motorola	081
MTC	006, 004, 062, 101
Multitech	043
NAD	015, 025
NEC	006, 130, 134, 040, 056, 007, 019, 024, 215
Nikei	043
Nikko	103
NTC	103
Onking	043
Onwa	043
Optimus	080
Optoma	230
Optonica	019, 081
Orion	096, 201, 202, 203, 204, 205, 028



Panasonic	034, 056, 080, 164, 219, 222
Philco	006, 003, 004, 024, 056, 059, 060, 063, 064, 127, 143, 164
Philips	164, 005, 038, 093, 127, 006, 003, 004, 059, 223
Pioneer	023, 025, 135, 176, 004, 018, 006, 216, 220
Portland	004, 143, 103
Prism	034
Proscan	144, 160, 161, 167
Proton	004, 058, 143, 171, 173, 193, 112
Quasar	034, 056
Radio Shack	004, 019, 127, 143, 043
RCA	160, 161, 144, 156, 065, 006, 004, 023, 024, 056, 074, 152, 081
Realistic	007, 019
Runco	072, 169, 073, 130, 179, 180, 181
S to Z	
Sampo	006, 004, 058, 228
Samsung	*101, 004, 127, 133, 143, 160, 089, 105, 217, 218, 221, 258
Sansei	120
Sansui	096
Sanyo	007, 053, 057, 082, 020
Sceptre	250
Scotch	004
Scott	004, 005, 028, 043, 048, 143



Sears	004, 007, 015, 028, 030, 038, 057, 082, 094, 143, 160, 052, 164
Seleco	189
Semivox	043
Semp	015
Sharp	*251, 081, 014, 019, 028, 004, 022, 143, 175
Signature	072
Sole	213, 214
Sony	*001, 126, 139
Soundesign	003, 004, 028, 043
Spectricon	112
Squareview	052
SSS	004, 043
Starlite	043
Supremacy	002
Supreme	001
Sylvania	006, 003, 059, 060, 063, 064, 127, 160, 164, 044, 211
Symphonic	052, 211
Tandy	081
Tatung	056, 062
Technics	034, 080
Technol Ace	028
Techwood	004



Teknika	002, 003, 004, 024, 028, 043, 072, 101, 143, 103, 164
Telerent	072
Tera	172
Thompson	210
TMK	004
TNCI	073
Toshiba	*015, 030, 007, 040, 062, 101, 233
Totevision	143
Universal	008, 009
Video Concepts	146
Vidikron	174, 188, 164
Vidtech	004
Viewsonic	174, 249
Wards	004, 064, 164, 008, 009, 019, 028, 060, 061, 063, 072, 074, 143
Westinghouse	076, 250
Yamaha	004, 006
York	004
Yupiteru	043
Zenith	072, 073, 095, 103, 208, 011, 096
Zonda	112



VCR's ans TV / VCR combos

A to L	
Admiral	025, 053
Aiko	117
Aiwa	034, 161, 101
Akai	043, 046, 124, 146
America Action	117
American High	031
Ampro	072
Anam	031, 103
Asha	040
Audio Dynamics	012, 023, 043
Audiovox	101
Beaumark	040
Broksonic	035, 037, 129, 025
Calix	101
Canon	028, 031
Capehart	108
CCE	024, 117
Cineral	117
Citizen	101, 117



Colt	024
Craig	003, 040, 135, 024, 101
Curtis Mathes	031, 041
Cybernex	040
Daewoo	005, 108, 111, 117, 017, 065, 007, 010
Daytron	108
DBX	012, 023, 043
Dynatech	034, 053
Electrohome	059, 101
Electroponic	101
Emerson	006, 029, 035, 037, 129, 153, 017, 025, 027, 031, 034, 036, 046, 101, 131, 138, 117
Fisher	003, 010, 008, 009
Fuji	031
Funai	034
Garrard	034
GE	031, 072, 144, 147, 063, 107, 109, 040, 053
Go Video	132, 155, 040, 136
Goldstar (LG)	101, 004, 012
Harley Davidson	034
Harman Kardon	012, 045
Harwood	024



Hitachi	004, 026, 034, 043, 063, 137, 150
HQ	034
Hugues	004
Instantreplay	031
JCL	031
JCPenney	004, 012, 031, 040, 101
Jensen	043
JVC	048, 043, 055, 060, 130, 150, 152, 012, 031
KEC	101, 117
Kenwood	034, 150, 014, 048
KLH	024
Kodak	031, 101
Lloyd	034
Logik	024
LXI	003, 009, 017, 034, 101, 004
M to S	
Magin	040
Magnasonic	117
Magnavox	067, 031, 034, 068, 041, 156, 170
Marantz	067, 069, 012, 031
Marta	101
Matsui	027, 030



Matsushita	031
MEI	031
Memorex	040, 101, 003, 014, 031, 034, 053, 072, 134, 139, 025
MGA	045, 046, 059
MGN Technology	040
Minolta	004
Mitsubishi	059, 061, 051, 004, 046, 045, 053
Motorola	031, 053
MTC	034, 040
Multitech	024, 034
NEC	012, 023, 043, 048
Nikko	101
Noblex	040
Nordmende	043
Olympus	031
Optimus	053, 101
Optonica	053, 054
Orion	025
Panasonic	031, 070, 133, 140, 163
Pentax	004, 031, 063
Philco	031, 034, 067, 025
Philips	031, 034, 054, 067, 101, 150



Pilot	101
Pioneer	021, 004, 048
Portland	108
Profitronic	040
Protec	024
Pulsar	072
Quartz	014
Quasar	031, 070, 133, 140, 163, 014
Radio Shack	123, 034
Radix	101
Randex	101
RCA	107, 109, 144, 041, 031, 004, 034, 040, 140, 147, 158, 053
Realistic	003, 008, 014, 031, 034, 040, 053, 054, 101, 010
Rico	058
Runco	072
Salora	014
Samsung	040, 017, 107, 109, 113, 115, 124
Sanky	053
Sansui	043, 135, 048, 025, 034
Sanyo	003, 014, 040, 134
Scott	017, 037, 129, 131
Sears	003, 004, 008, 014, 017, 081, 101, 010, 031, 034



Sharp	053, 031, 054, 159
Shintom	024
Shogun	040
Singer	024
Sony	001, 057, 058, 003, 052, 053, 031, 154, 171, 009, 034
Soundesign	034
STS	004
Sylvania	031, 034, 059, 067
Symphonic	034
T to Z	
Tandy	034, 010
Tatung	043
TEAC	034, 043
Technics	031, 070
Teknika	031, 034, 101
Thomas	034
TMK	006, 040
Toshiba	017, 131, 004, 008, 059, 082, 150
Totevision	040, 101
Unitech	040
Vector Research	012
Video Concepts	012, 034, 046



Videosonic	040
Wards	003, 004, 017, 024, 031, 034, 040, 053, 054, 131
Westinghouse	024, 025
XR-1000	024, 031, 034
Yamaha	012, 034, 043
Zenith	072, 034, 001, 058, 080, 101, 153, 048, 025

DVD players and TV / DVD combos

A to Z	
Aiwa	004, 008
Akai	165
Alpine	221
Apex Digital	251, 246
Arcam	215
Cyberhome	220
Daewoo	220
Denon	226, 241
Funai	006, 230, 231
GE	230, 231
Go Video	014
Goldstar (LG)	235, 250



Harman Kardon	243
Hitachi	223
Hiteker	246
Integra	002, 238
JVC	233, 238
Kenwood	216
KLH	016
Krell	011
Lexicon	010
Magnavox	254, 237
Marantz	253, 242
McIntosh	217
Mintek	251
Mitsubishi	227
Myryad	224, 005
NAD	247
Nakamichi	225
Onkyo	240
Optimus	229
Panasonic	228, 012
Philips	253, 237, 214, 003
Pioneer	255, 222, 229



Proceed	245
Proscan	230, 231
RCA	230, 231
Samsung	165, 236, 248, 014
Sanyo	009
Sharp	252
Sony	001, 218, 007
Sylvania	006
Symphonic	006
Tatung	224
Technics	228
Theta Digital	229
Toshiba	013, 130, 233, 244, 219
Venturer	015
Yamaha	249, 234
Zenith	250, 234, 235, 239



Audio systems

A to L	
ADC	200
Adcom	072, 082, 092, 161
Aiwa	025, 071, 104, 114, 170, 171, 091, 100
Akai	139, 093
AMC	125, 126, 127, 128
Angstrom	142
Arcam	141
Audio Access	147
Audio Alchemy	135
Audio File	203
Audio Matrix	077
Audio Technica	134
B & K	096, 097
Bose	070, 170, 113, 199, 206, 207
Bryston	015
Carver	003, 008, 028, 099, 151, 203, 014, 016, 040, 090
Casio	204
Chiro	140
Cinema Sound	084, 134



Citation	148
Clarion	026
Curtis Mathes	204
Denon	084, 151, 155, 188, 056, 119
Enlightened Audio	049, 050
Fisher	151
Fosgate Audionics	062, 148
Goldstar (LG)	072, 006
Harman Kardon	153, 148, 162, 060, 066, 115
Hitachi	020
Inkel	005
JCPenney	102, 204
Jensen	058
JVC	013, 163, 176
Kenwood	005, 026, 057, 166, 095
Koss	102
Krell	150
Kyocera	200
Lexicon	120, 167, 171, 172
Luxman	035, 137, 139, 165, 004, 029
LXI	204



M to Z	
Magnavox	152, 164, 191, 043
Marantz	028, 048, 063, 191, 090
McIntosh	173
MCS	204
Meridian	009, 051
Mitsubishi	180
Mondial	022, 023, 042, 073, 075
NAD	048
Nakamichi	111, 182, 183, 079, 087
NEC	080
Onkyo	084, 046, 012, 030, 041, 081, 103, 044
Optimus	017, 036, 138, 026
Panasonic	007, 088, 129, 130, 132, 195
Parasound	129, 130, 132
Philips	063, 188, 189, 191
Pioneer	084, 039, 045, 054, 069, 078, 168, 128, 158
Proceed	144
Quasar	007, 088, 129, 130, 132, 195
RCA	010, 067, 117, 156
Realistic	019, 034, 037, 047
Rotel	074, 083, 085



Samsung	123
Sansui	063, 110, 032, 116
Sanyo	151
Scott	019
Sears	204
Sharp	026, 057, 094, 175
Sherwood	024, 038
Sony	001, 011, 053, 055, 187, 112, 205
Soundesign	036
SSI	068
TEAC	019, 059, 111, 109
Technics	076, 088, 122, 193, 080, 098
Theta Digital	065
Toshiba	033, 112
Yamaha	021, 026, 031, 067, 192, 002, 101, 118
Zenith	143, 106