


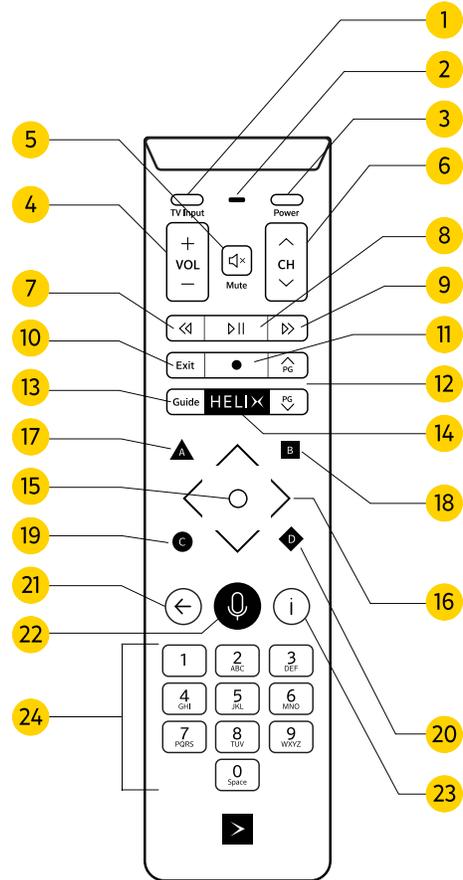

Television

Discover all the features of the Helix voice remote

- 1 **TV Input**
- 2 **Light**
- 3 **Power supply**
- 4 **Vol + or -**
- 5 **Mute**
- 6 **CH + or -**: Enables you to change to the next or previous channel.
- 7 **Rewind** <<
- 8 **Play/Pause**
- 9 **Fast forward** >>
- 10 **Exit**
- 11 **Record**
- 12 **PG Up and PG Down**: Lets you jump several lines up or down in the Program Guide and menus.
- 13 **Guide**
- 14 **HELIX**: Displays the Helix main menu
- 15 **Middle button**: Selects a highlighted item in an on-screen menu.
- 16 **Navigation pad arrows**: The right arrow lets you scroll through the Mini-Guide. The down arrow enables you to access on-screen viewing commands.
- 17 **A**: Displays the Help menu.
- 18 **B**: Displays accessibility settings.



- 19 **C**: Launches the Sports application and displays scores, even while you are viewing a program.
- 20 **D**: Deletes a digital recording or several recordings in a file.
- 21 **Back arrow**: Returns to previous screen. While watching a program, press the back arrow to see the nine previous items viewed.
- 22 **Microphone button**: Activates voice command. To use voice command, hold down the Microphone button and speak.
- 23 **info** **i**: Displays detailed information about the program.
- 24 **Alphanumeric keypad**: Lets you tune directly into a channel or use the predictive search feature to perform a keyword search.



For more information on Helix voice remote features, please visit our support site

