



VIDEOTRON




Time required:

5 to 7 minutes

Television

# Discover all the features of the Helix voice remote

- 1 **TV Input**
- 2 **Light**
- 3 **Power**
- 4 **Vol + or -**
- 5 **Mute** Enables or disables sound.
- 6 **CH + or -** Enables you to change to the next or previous channel.
- 7 **<< Rewind**
- 8 **Play/Pause**
- 9 **>> Fast forward**
- 10 **Exit**
- 11 **Record**
- 12 **PG Up and PG Down** Lets you jump several lines up or down in the Program Guide and menus.
- 13 **Guide**
- 14 **HELIX** Displays the Helix main menu
- 15 **Middle button** Selects a highlighted item in an on-screen menu.
- 16 **Navigation pad arrows** Allows you to navigate on-screen menus.
- 17 **A** Displays the Help menu.
- 18 **B** Displays accessibility settings.

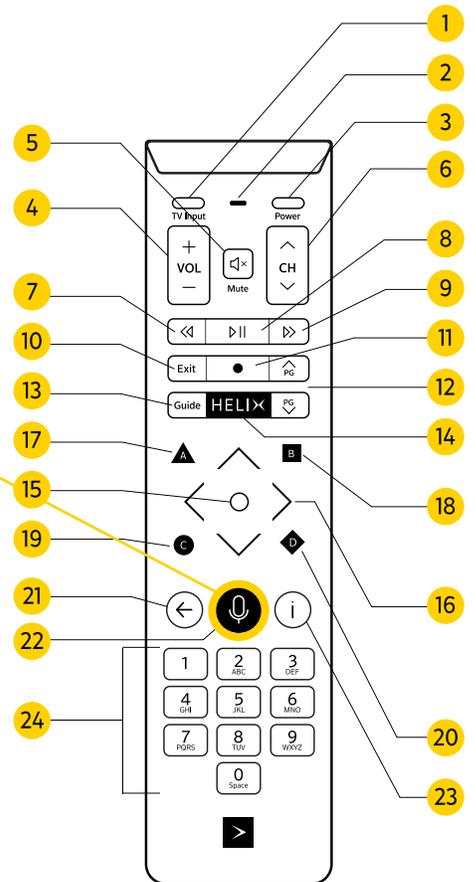

## How to dictate a voice command

To use voice command, hold down the **Microphone** button and speak.

- 19 **C** Launches the Sports application and displays scores.
- 20 **D** Deletes a digital recording or several recordings in a file.
- 21 **Back arrow** Returns to previous screen.
- 22 **Microphone button** Activates voice command.
- 23 **i** **Info** Displays detailed information about the program.
- 24 **Alphanumeric keypad** Lets you tune directly into a channel or use the predictive search feature to perform a keyword search.



For more information on Helix voice remote features, please visit our support page.

Last update: 2025/03

